


Installation Instructions BALL JOINT CAP KIT

*Please read these instructions completely
BEFORE starting your installation!*

- Your kit includes:
- 2) Polished Ball Joint Caps
 - 2) 1/4-28 x 1/2" Flat Socket Head Screws

Install by first removing the grease fitting from the ball joint. Place the Ball Joint Cap on top of the ball joint and secure with the Flat Socket Head Screw provided. Do not tighten the screw too tight, as it will loosen the preload in the ball joint. If the ball joint does not have threads in it, it must be tapped 1/4-28 thread. Use grease on the tap to hold the chips so they come out with the tap.

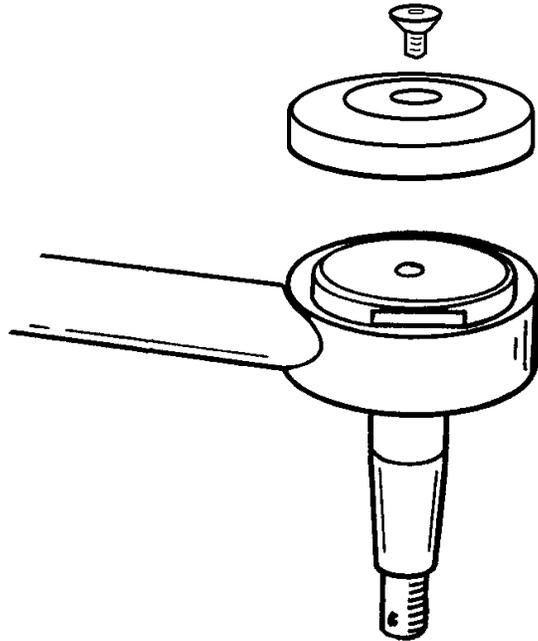


Installation Instructions BALL JOINT CAP KIT

*Please read these instructions completely
BEFORE starting your installation!*

- Your kit includes:
- 2) Polished Ball Joint Caps
 - 2) 1/4-28 x 1/2" Flat Socket Head Screws

Install by first removing the grease fitting from the ball joint. Place the Ball Joint Cap on top of the ball joint and secure with the Flat Socket Head Screw provided. Do not tighten the screw too tight, as it will loosen the preload in the ball joint. If the ball joint does not have threads in it, it must be tapped 1/4-28 thread. Use grease on the tap to hold the chips so they come out with the tap.

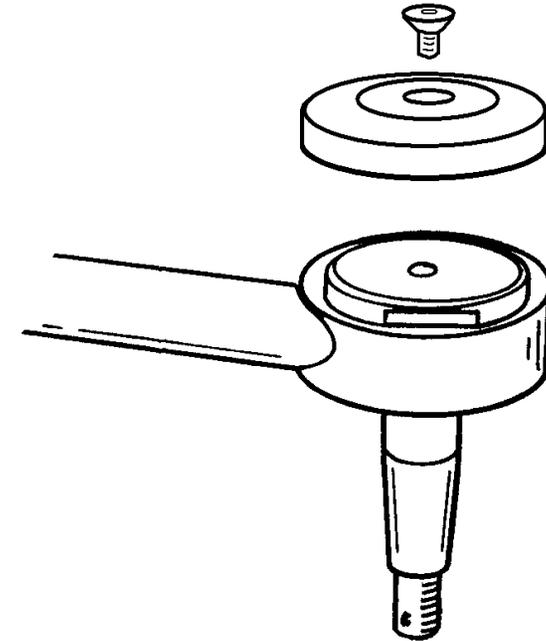

1-800-841-8188 Illinois (847) 487-0150

© HEIDTS Hot Rod Shop 2008

Rev. 4-22-08

IN-020



1-800-841-8188 Illinois (847) 487-0150

© HEIDTS Hot Rod Shop 2008

Rev. 4-22-08

IN-020