Installation Instructions 1964-1967 MUSTANG SMALL BLOCK MOTOR MOUNT STANDS

Please read these instructions completely **BEFORE** starting your installation!


Parts List:

1) Pair Motor Mount Stands, Left & Right 2) Base Plates

8) 3/8-16 x 1" Hex Bolts 2) 7/16-14 x 4-1/2" Hex Bolts

8) 3/8-16 Nylock Nuts 2) 7/16-14 Nylock Nuts

Bolt your motor mount blocks to your engine. Next bolt the motor stand base plates to the crossmember using the supplied 3/8-16 bolts and nuts. Now attach the stands to the engine mounts on the block note that there is a left and right stand and they are offset to the rear. Lower the engine to the correct location and tack weld the stands to the base plates. The stands may need some trimming to get the desired engine alignment and clearances. Now unbolt the stands from the engine and crossmember. Remove them for finish welding and reinstall.

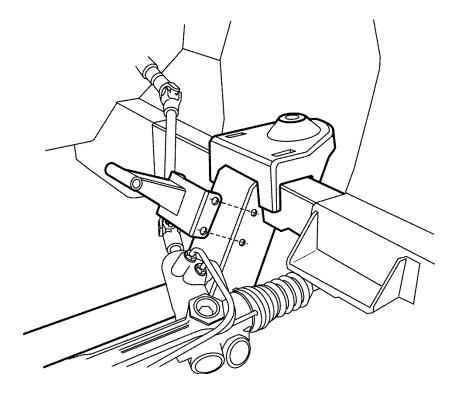

For questions on installations please call 800-841-8188 In Illinois (847) 487-0150

