

Installation Instructions

'67-'69 ALUMINUM BODY MOUNT KIT


*Please read these instructions completely **BEFORE** starting your installation!*

Your HEIDTS Hot Rod Shop Camaro Subframe Connectors contains the following items:

- | | |
|---|----------------------------|
| 4) Lower Body Mount (2.18" OD) | 4) 5/8" X 2-1/2" OD Washer |
| 2) Upper Body Mount, Rear (2.18" OD, 1.0" Tall) | 4) 5/8" Nylock Nut |
| 2) Upper Body Mount, Mid (2.5" OD, 1.15" Tall) | 2) 1/2" X 2-3/4" Bolts |
| 2) Lower Core Support Mount (2.5" OD, .9" Tall) | 2) 1/2" X 2" OD Washer |
| 2) Upper Core Support Mount (2.18 OD) | 2) 1/2" Nylock Nut |
| 4) 5/8 X 3" Bolts | |

NOTE: Spray all body bolts with brand name penetrating spray the day before you plan to work on the vehicle.

1. Remove the body bolts and raise the body off the subframe, being careful not to twist or stress the body in any way.
2. Remove the existing bushings and replace with the aluminum bushings using the pictures below as a guide.

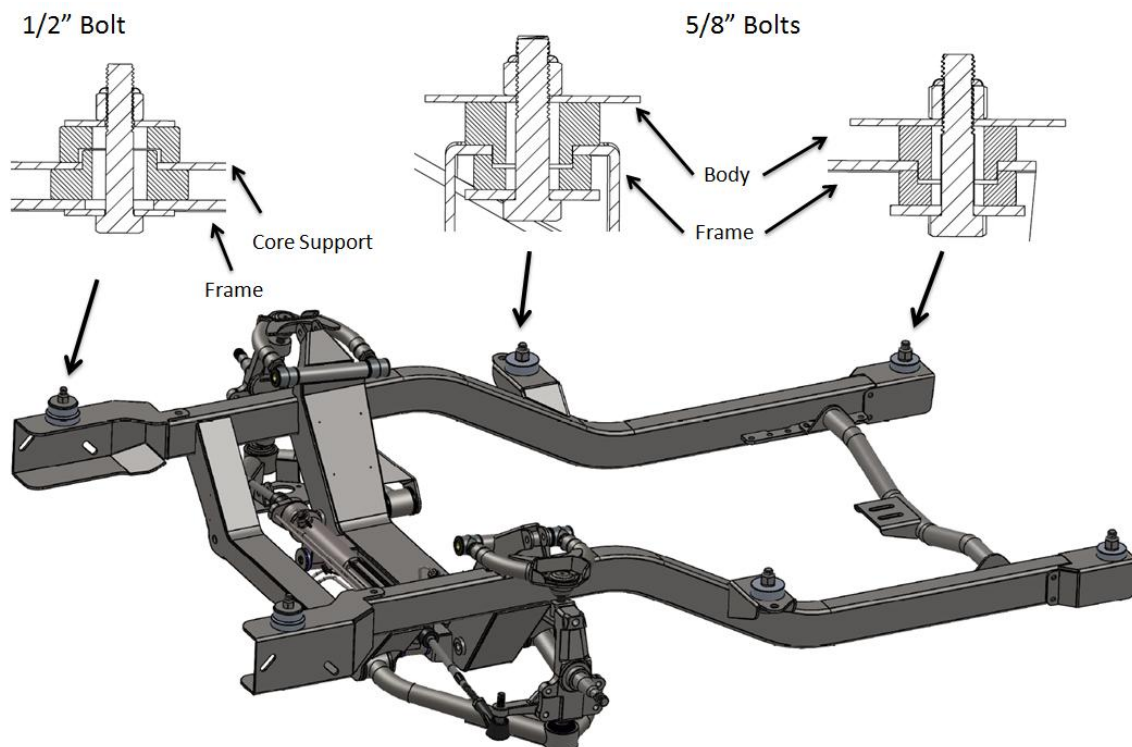

For questions on installations please call 800-841-8188 In Illinois (847) 487-0150

