

Installation Instructions


1964-70 MUSTANG SMALL BLOCK FORD MOTOR MOUNT STANDS

*Please read these instructions completely
BEFORE starting your installation!*

Parts List:

- 1) Pair Motor Mount Stands, Left & Right
- 2) ½ -13 x 3" Bolts
- 4) 3/8" Washers
- 4) 3/8-16 Nylock Nuts
- 4) 3/8-16 x 5" Bolts
- 8) 3/8" Washers
- 2) 1/2-13 Nuts

Begin by bolting your motor mounts to your engine block. Bolt the stands to the cross member using the 3/8-16 x 5" bolts, washers and nuts supplied, noting that there are left and right stands. The left stand is pictured below having the stand offset towards the front of the vehicle. The right side stand is also offset towards the front. Do not fully tighten. Lower the engine down until the mounts are lined up with the stands and insert the two ½" bolts and tighten. Now tighten the 3/8" bolts that hold the stands to the crossmember.

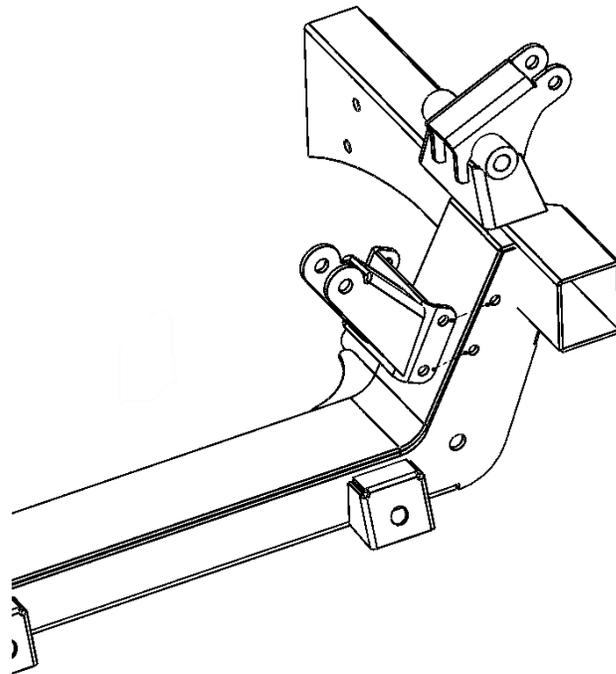

For questions on installations please call 800-841-8188 In Illinois (847) 487-0150

